




SPARE PARTS & COMPLETE UNITS

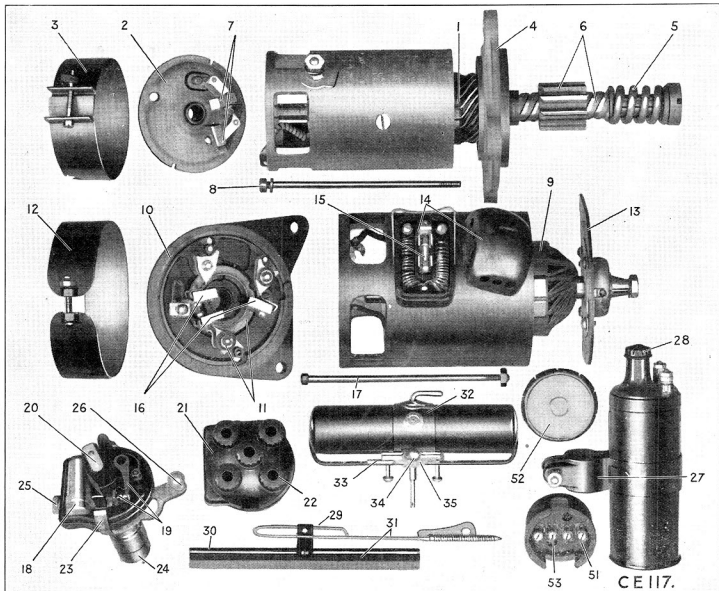

MORRIS MINOR MODEL 1933.



JOSEPH LUCAS LTD., BIRMINGHAM, ENGLAND

IO. C.E. 117 1/13/L

JANUARY





tion

DESCRIPTION OF PART.

Quote this Part No.

English
List Price.
£ s. d.


	STARTER COMPLETE—6v. E.R. CLOCKWISE—	M35A/0 A11/0	5 10 0 each
1	Armature complete	AY904	1 17 6 each
2	C.E. Bracket c/w Brushgear, Brushes & Bearing Bush ...	BY923	7 6 each
3	Commutator End Band Cover complete with Nut & Screw ...	HY10	1 4 each
4	Driving End Bracket complete with Bearing Bush ...	CY948	6 0 each
	Field Coils (per set)	FC801	10 0 set
5	Main Spring (drive)	L3352/1A	1 6 each
6	Pinion and Sleeve Assembly (drive)	JY115	12 6 each
7	Set of Brushes	I26	2 0 set
	Set of Brush Springs	ST138	8 set
8	Through Fixing Bolts	L3162/1	4 0 dozen
	Through Fixing Bolts	L3162/1	6 each
	DYNAMO COMPLETE—6v. E.R. CLOCKWISE—	C45E/0 A17/1	4 10 0 each
9	Armature complete	AY225	1 12 6 each
10	C.E. Bracket c/w Brushgear, Brushes and Bearing Bush ...	BY252	13 6 each
	C.E. Bracket Bearing Wick and Spring Assembly	L4034/1	6 each
11	Control Brushgear complete—less Brush	EY287	1 9 each
12	Commutator End Band Cover complete with Nut and Screw ...	HY343	1 0 each
13	Driving End Bracket c/w Bearing and Bearing Plate ...	CY265	11 6 each
	Driving End Ball Bearing	No.117	8 3 each
	Field Coils (per set)	FC261	10 6 set
14	Resistance Unit complete	TFR1/1 A17	4 0 each
15	Resistance Unit Fuse—8-amp. (per box of 3-dozen)	FAS	1 6 box
	Resistance Unit Cover	L3068/4B	1 3 each
	Resistance Unit Cover Clip	L3492/4A	†
16	Set of Brushes	D38	2 3 set
	Set of Brush Springs	ST328	6 set
17	Through Fixing Bolts	L4056/4	4 0 dozen
	Through Fixing Bolts	L4056/4	6 each
	DJ4/7 A17/0 DISTRIBUTOR—	DJ4/7 A17/0	1 5 6 each
18	Condenser complete with Clip	CON246	3 6 each
19	Contact Breaker Lever Ass. c/w Contact Screw and Contact ...	ST351	3 0 set
20	Distributor Arm Assembly	M2248/3B	1 6 each
21	Distributor Moulded Cover complete with Cable Nuts	M2902/2	4 0 each
22	Distributor Moulded Cover Cable Nut	M2244/3	4 0 dozen
	Distributor Moulded Cover Cable Nut	M2244/3	6 each
	Distributor Moulded Cover Carbon and Spring	M43	6 each
23	Distributor Moulded Cover Spring Clip	M2241/1A	†
24	Driving Dog	M1106/4	6 each
25	Lubricator	M2023/4C	1 0 each
26	Securing Plate Assembled complete with Nut and Screw ...	M2891/1	1 6 each
	4Q6/6 A17/0 IGNITION COIL—	4Q6/6 A17/0	1 0 0 each
27	Coil Fixing Bracket	No.4Bracket	1 6 each
	Coil Fixing Bracket Liner	D466	†
28	H.T. Cable Nut	M2244/3	4 0 dozen
	H.T. Cable Nut	M2244/3	6 each
	30G SUCTION OPERATED WIPER—	30G/Wiper	19 6 each
29	Arm Assembly	AZ133	9 each
30	Squeegee Assembly	AZ116	1 3 each
31	Arm and Squeegee Assembly (7in.)	AZ33	2 0 each
32	Dust Band Cover	NC2201/35	9 each
33	Suction Tube	NC2201/37	†
34	Valve Stem	NC2201/38	†
35	Valve Check Plate	NC2201/41	†
	C/A333 INSTRUMENT PANEL—	C/A333	1 6 0 each
36	Ammeter (C.P. Rim)	AMP26	5 0 each
	Bulb (dash light)	BAS.S.S	1 3 each
	Bulb (warning light)	MES252A	3 6 dozen
37	Dash Lamp Cover	SW4746	1 3 each
38	Panel Connection	L4932/1	1 0 each
39	Switchbox	PLC/0 L1/0	10 0 each
	Switchbox Assembled Switchbase c/w Rivetted Terminals ...	JX1024	3 0 each
40	Switchbox Handle complete with Fixing Washer	SK21	1 9 each
	Switchbox Ignition Stem Assembly	L3972/4	1 3 each
41	Switchbox Ignition Key	L4449/3	6 each

†—Refer to Set of Minor Parts at end of List.

If the model and type marks on your machine are not the same as given here, please quote them in full when ordering.



IST UPON GENUINE LUCAS SPARE PARTS

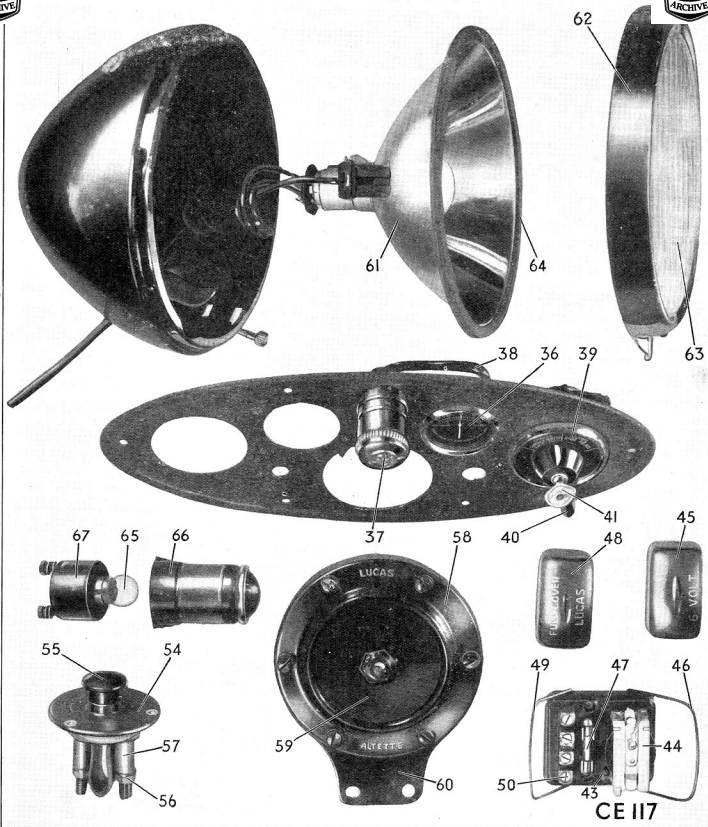

CE 117



INSIST UPON GENUINE LUCAS SPARE PARTS



on	DESCRIPTION OF PART.	Quote this Part No.	English List Price £ s. d.
	INSTRUMENT PANEL—Continued—		
	Switchbox Ignition Contact Plate complete with Contacts ...	L4370/1	3 0 dozen
	Switchbox Ignition Contact Plate complete with Contacts ...	L4370/1	6 each
	Switchbox Rotor Insulating Plates complete with Contacts ...	L3845/3	1 0 each
	Switchbox Switch Spring	L4542/1	3 0 dozen
	Switchbox Switch Spring	L4542/1	6 each
	Warning Light	WL3/0/6v	3 6 each
	Warning Light Cover and Glass Assembly (C.P.)	LR41/CP	6 each
	CF3 CUT-OUT—	CF3/0/6v	11 6 each
43	Assembled Base c/w Rivetted Terminals and Fuse Clips ...	JX97	3 6 each
44	Cut-out complete—SB5 (6 volt)	AZ92	6 6 each
45	Cut-out Cover	L3306/1A	8 each
46	Cut-out Cover Spring Clip	L3586/1	†
47	Fuse Carton Assembled (per box of ½-dozen)	L3275/4	1 6 per box
48	Terminal Cover	L3306/4B	3 each
49	Terminal Cover Spring Clip	L3586/2	†
50	Terminal Screw	L963/5A	†
	C31 JUNCTION BOX—	C31	3 0 each
51	Cover complete with Insulator	L2578/2	4 0 dozen
52	Cover complete with Insulator	L2578/2	6 each
53	Terminal Screw	L963/5A	†
	ST8/0 STARTER SWITCH—	ST8/0 A/0	4 0 each
54	Knob	L3909/1B	8 each
55	Terminal Nut	L3585/3	†
56	Terminal Insulating Bush	L3596/2A	†
	HF318 ALTETTE ELECTRIC HORN—	HF318/4/12v	1 3 0 each
58	Front Cover	L3958/4B	2 0 each
59	Piston	L3201/2F	6 each
	Cable Clip	L3454/4A	1 3 dozen
60	Bracket	L4808/3	9 each
	RG35P HEADLAMP—C.P.R.—	RG35P/CPR/12v	3 10 0 pair
	Bulb—main	612LG	4 3 each
	Bulb—pilot	BAS.8.S	1 3 each
61	Reflector complete with Main and Pilot Bulb Holder	RA187	7 6 each
62	Front Rim complete with Glass	LR97	7 6 each
63	Glass	NC316/7	2 6 each
64	Reflector Joint Bead	NB317/39	3 0 dozen
	Reflector Joint Bead	NB317/39	6 each
	T101 TAIL LAMP—Black—C/W CABLE—	T101/6v/Blk/ c/w cable	3 0 each
65	Bulb	BAS.8.S	1 3 each
66	Body complete with Ruby and Clear Windows	LB84	1 9 each
67	Fixing Shell Assembly	SO256	1 6 each
	Bulb Holder Interior Components	ST415	6 set
	STW9E BATTERY WITH FITTINGS—less COVER—DRY—	STW9E only	2 3 6 each
	Terminal Lug—positive (SMM & T)	S2267/1	1 6 each
	Terminal Lug—negative (SMM & T)	S2267/2	1 6 each
	Vent Plug with Washer	S2267/4D	†
	Vent Plug Washer	1336/5B	†
	Set of Fixing Rods (chassis fixing)	ST232	2 0 per set
	SET OF MINOR PARTS—	ST592	2 0 set
	Set of Cables	C420	1 4 6 set

If the model and type marks on your machine are not the same as given here, please quote them in full when ordering.



ST UPON GENUINE LUCAS SPARE PA