


# THE MORRIS TEN-FOUR AND TWELVE-FOUR LUBRICATION CHART

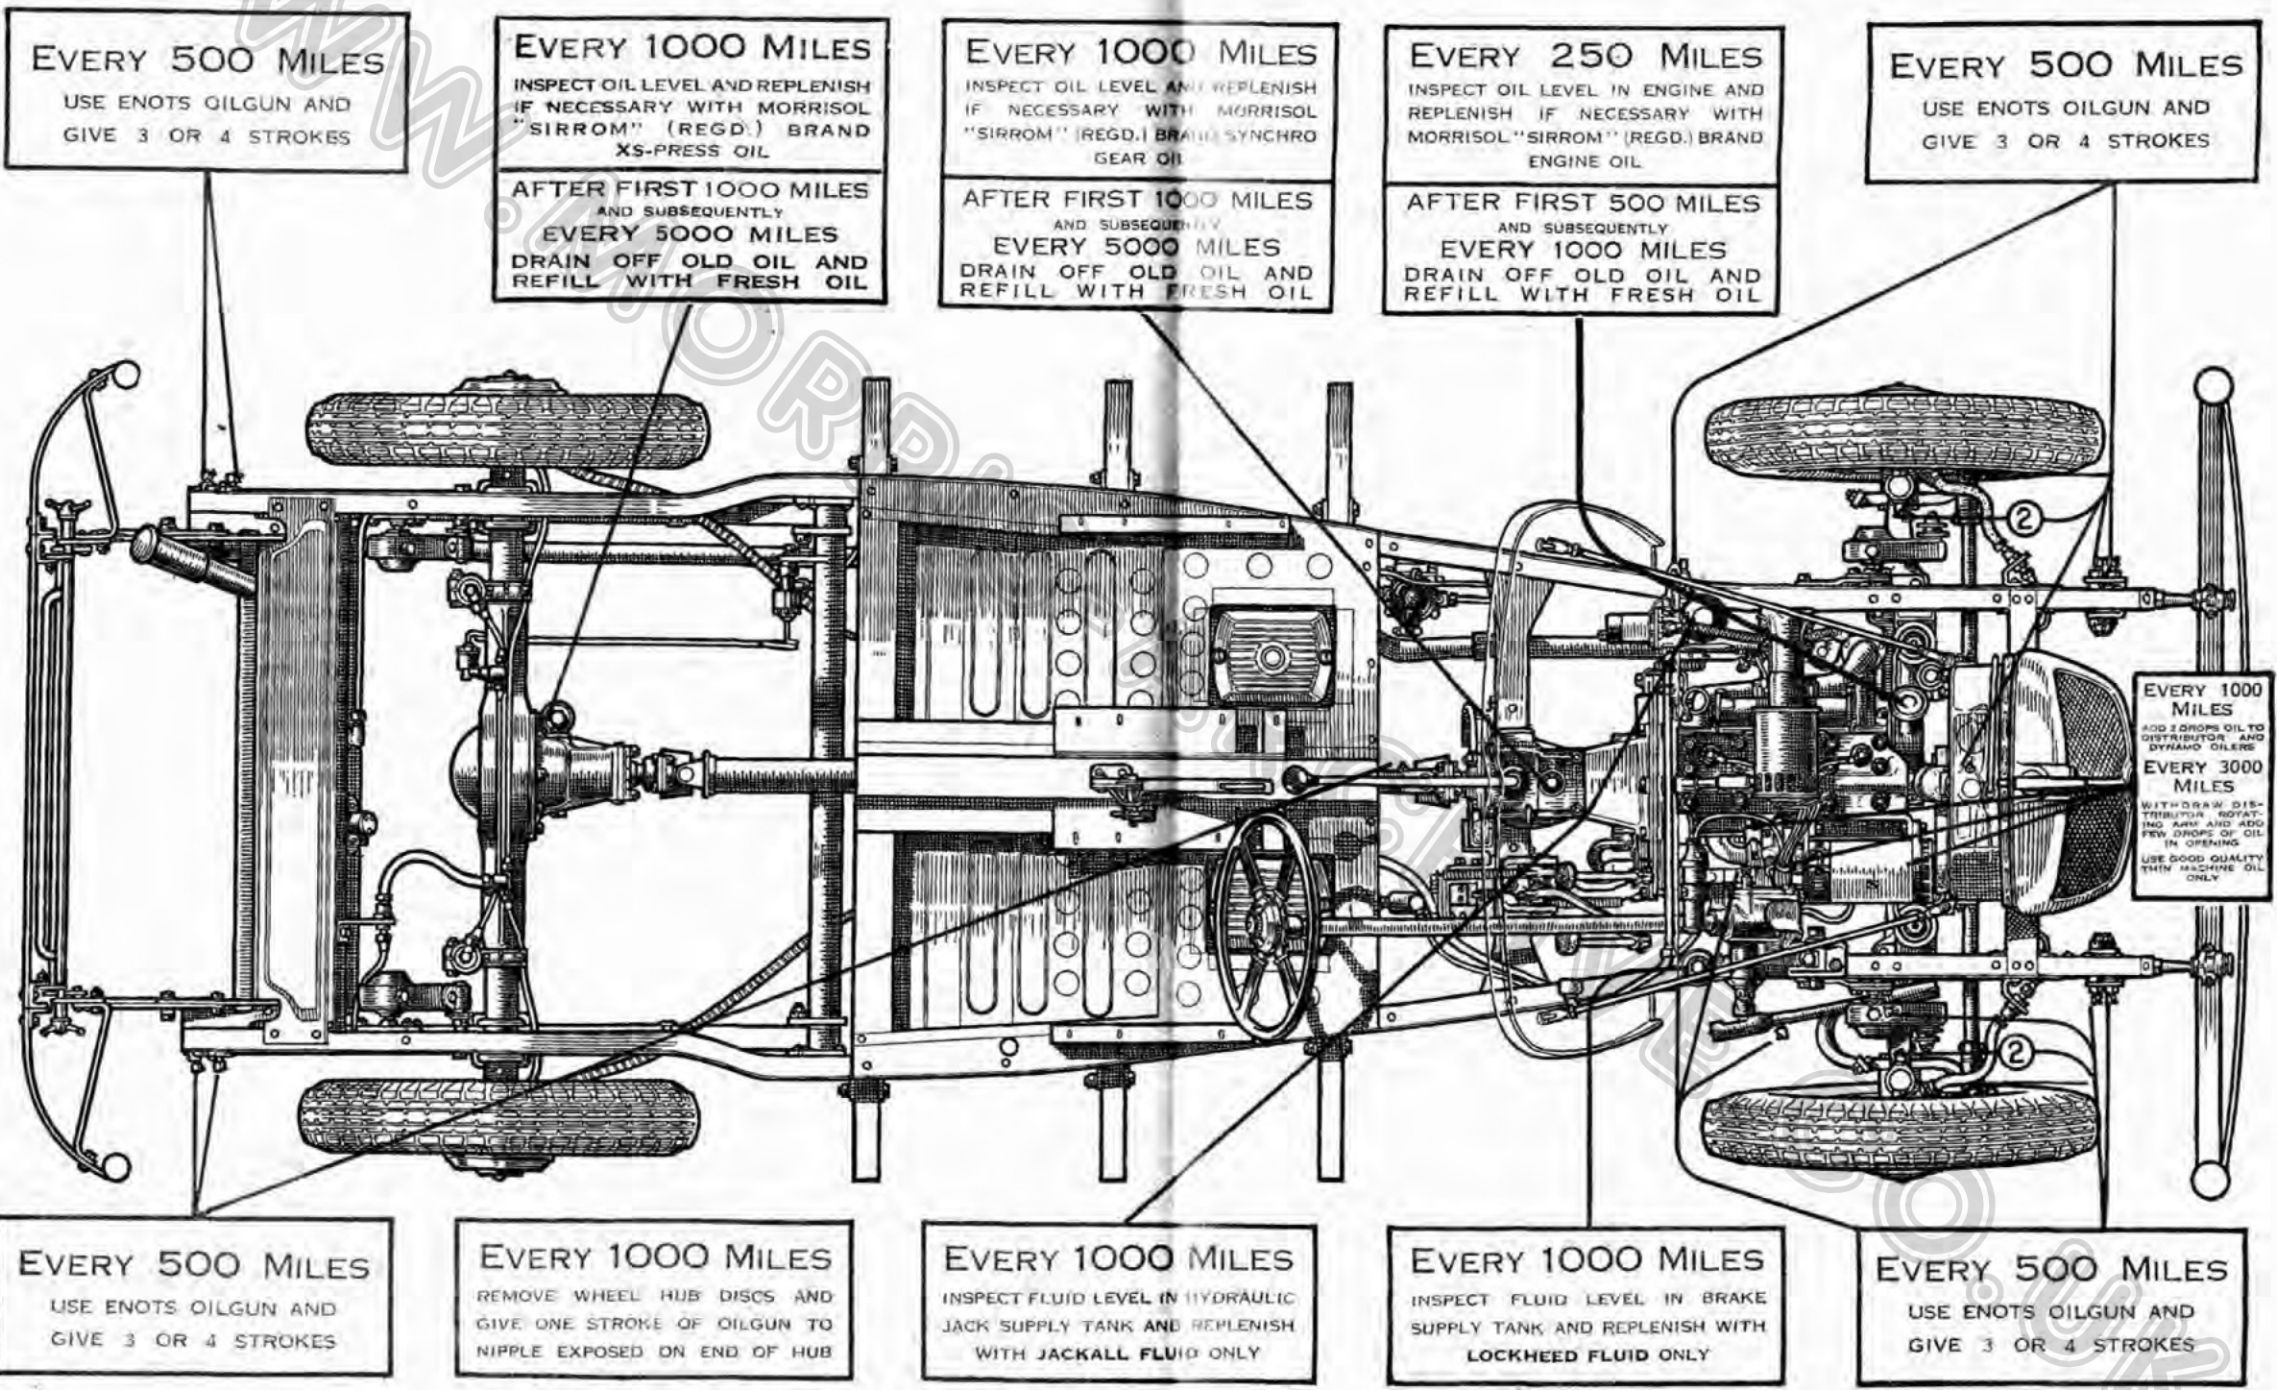

**EVERY 500 MILES**  
USE ENOTS OILGUN AND GIVE 3 OR 4 STROKES

**EVERY 1000 MILES**  
INSPECT OIL LEVEL AND REPLENISH IF NECESSARY WITH MORRISOL "SIRROM" (REGD.) BRAND XS-PRESS OIL  
**AFTER FIRST 1000 MILES AND SUBSEQUENTLY EVERY 5000 MILES**  
DRAIN OFF OLD OIL AND REFILL WITH FRESH OIL

**EVERY 1000 MILES**  
INSPECT OIL LEVEL AND REPLENISH IF NECESSARY WITH MORRISOL "SIRROM" (REGD.) BRAND SYNCHRO GEAR OIL  
**AFTER FIRST 1000 MILES AND SUBSEQUENTLY EVERY 5000 MILES**  
DRAIN OFF OLD OIL AND REFILL WITH FRESH OIL

**EVERY 250 MILES**  
INSPECT OIL LEVEL IN ENGINE AND REPLENISH IF NECESSARY WITH MORRISOL "SIRROM" (REGD.) BRAND ENGINE OIL  
**AFTER FIRST 500 MILES AND SUBSEQUENTLY EVERY 1000 MILES**  
DRAIN OFF OLD OIL AND REFILL WITH FRESH OIL

**EVERY 500 MILES**  
USE ENOTS OILGUN AND GIVE 3 OR 4 STROKES

**EVERY 1000 MILES**  
ADD 2 DROPS OIL TO DISTRIBUTOR AND DYNAMO OILERS  
**EVERY 3000 MILES**  
WITH DRAW DISTRIBUTOR OFF AND ADD FEW DROPS OF OIL IN OPENING  
USE GOOD QUALITY TINY MACHINE OIL ONLY

**EVERY 500 MILES**  
USE ENOTS OILGUN AND GIVE 3 OR 4 STROKES

**EVERY 1000 MILES**  
REMOVE WHEEL HUB DISCS AND GIVE ONE STROKE OF OILGUN TO NIPPLE EXPOSED ON END OF HUB

**EVERY 1000 MILES**  
INSPECT FLUID LEVEL IN HYDRAULIC JACK SUPPLY TANK AND REPLENISH WITH JACKALL FLUID ONLY

**EVERY 1000 MILES**  
INSPECT FLUID LEVEL IN BRAKE SUPPLY TANK AND REPLENISH WITH LOCKHEED FLUID ONLY

**EVERY 500 MILES**  
USE ENOTS OILGUN AND GIVE 3 OR 4 STROKES

IN ENOTS OILGUN USE MORRISOL "SIRROM" (REGD.) BRAND TRANSMISSION OIL