

# THE MORRIS TEN-FOUR (Series III) LUBRICATION CHART

EVERY 500 MILES  
APPLY ENOTS OILGUN TO  
NIPPLES INDICATED AND GIVE  
3 OR 4 STROKES.

EVERY 250 MILES  
INSPECT OIL LEVEL IN ENGINE  
AND REPLENISH IF NECESSARY  
WITH MORRISOL "SIRROM" (REGD.)  
BRAND ENGINE OIL

AFTER FIRST 500 MILES  
AND SUBSEQUENTLY  
EVERY 1000 MILES  
DRAIN OFF OLD OIL AND  
REFILL WITH FRESH OIL


EVERY 1000 MILES  
INSPECT OIL LEVEL AND RE-  
PLENISH IF NECESSARY WITH  
MORRISOL "SIRROM" (REGD.)  
BRAND SYNCHRO-GEAR OIL

AFTER FIRST 1000 MILES  
AND SUBSEQUENTLY  
EVERY 5000 MILES  
DRAIN OFF OLD OIL AND  
REFILL WITH FRESH OIL

EVERY 1000 MILES  
INSPECT OIL LEVEL AND RE-  
PLENISH IF NECESSARY WITH  
MORRISOL "SIRROM" (REGD.)  
BRAND XS-PRESS OIL

AFTER FIRST 1000 MILES  
AND SUBSEQUENTLY  
EVERY 5000 MILES  
DRAIN OFF OLD OIL AND  
REFILL WITH FRESH OIL

EVERY 500 MILES  
APPLY ENOTS OILGUN TO  
NIPPLES INDICATED AND GIVE  
3 OR 4 STROKES

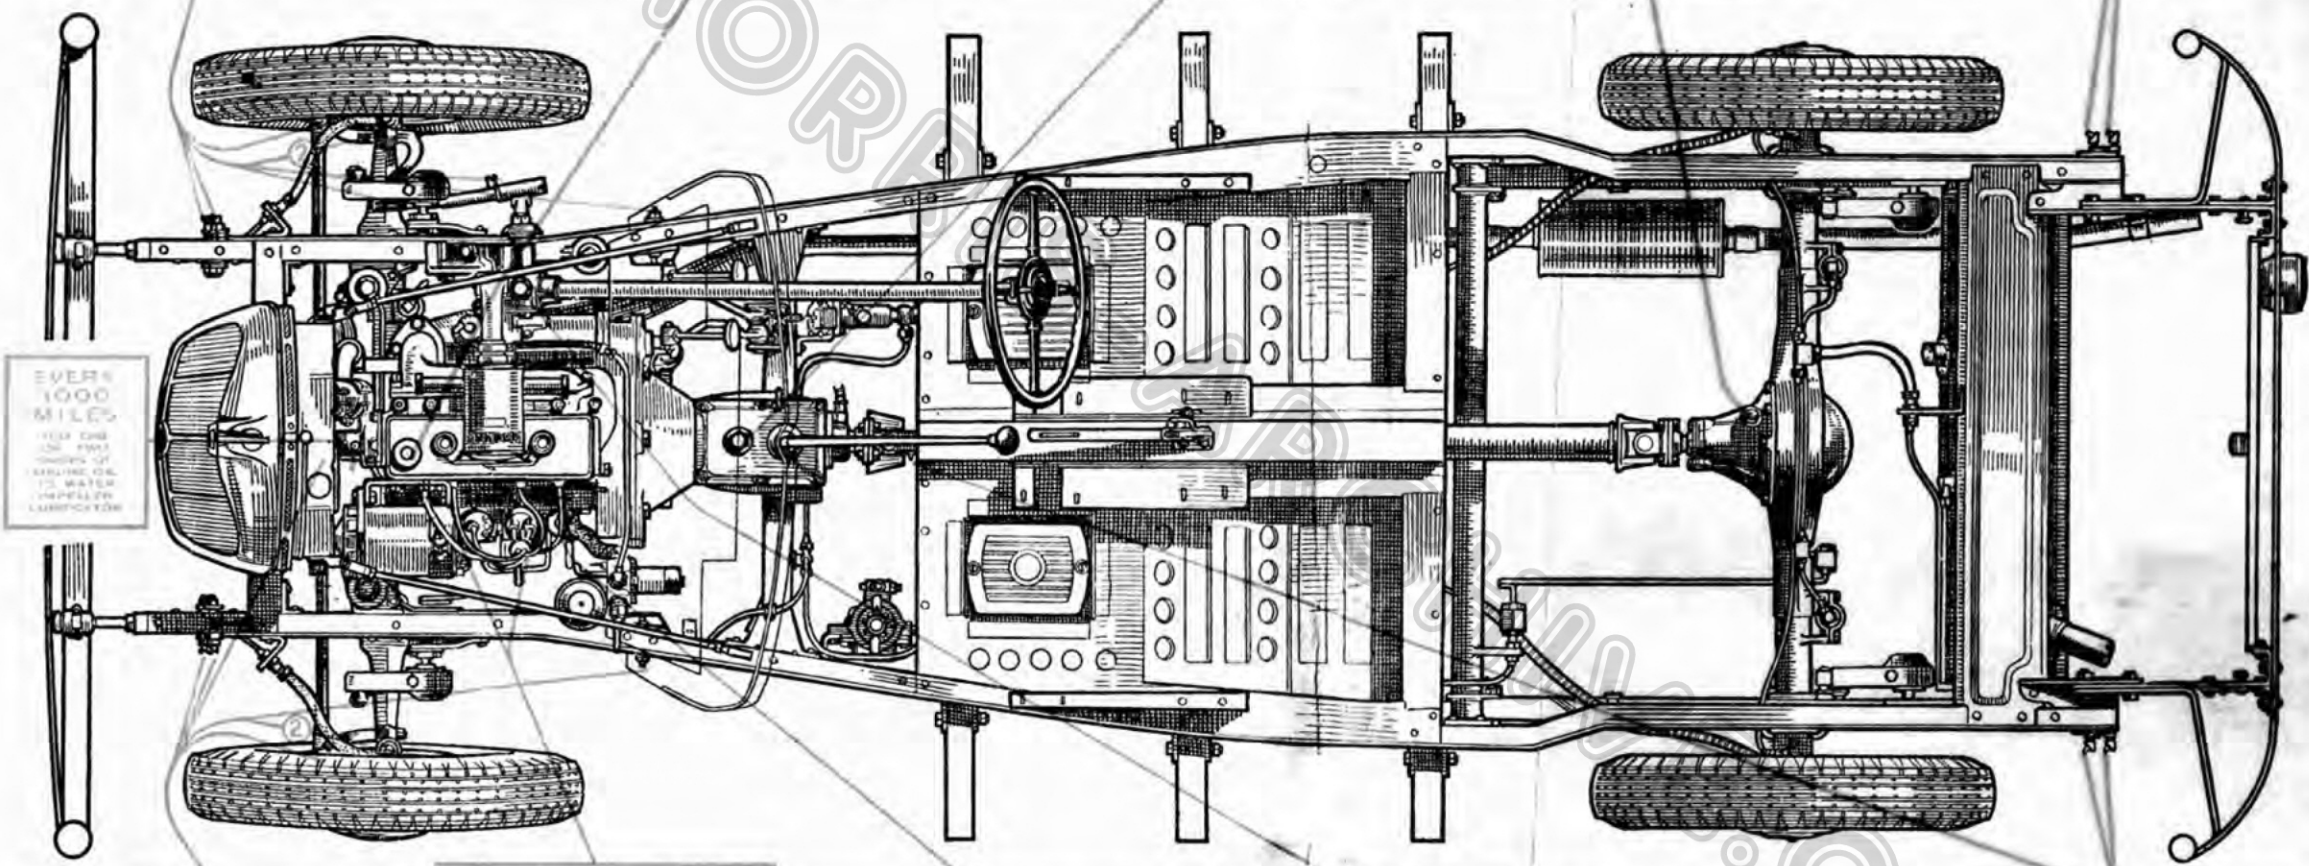

EVERY 1000 MILES  
TOP UP THE  
WATER LEVELS OF  
THE WATER  
PUMP AND  
LAMP GLASS

EVERY 500 MILES  
APPLY ENOTS OILGUN TO  
NIPPLES INDICATED AND GIVE  
3 OR 4 STROKES

EVERY 1000 MILES  
WASH THE OILS OFF THE CHASSIS  
WITH SOAP

EVERY 3000 MILES  
WITHDRAW THE FRONT SPRING  
AND ADD A TEASPOON OF TANK OIL TO  
THE SPRING. REINSURE AGAIN BY  
PULLING AND LUBRICATE ADVANCE MECH.  
WITH OILING OIL. REMOVE  
TYRONS GREASE TAP AND REFILL  
WITH GREASE

EVERY 2000 MILES  
REPLACE FILTER ELEMENT WITH  
EQUIVALENT FOR PERCOL AND REPLACE

EVERY 10,000 MILES  
REPLACE FILTER ELEMENT AND THE  
OIL WITH NEW ONE

EVERY 100 MILES  
INSPECT OIL LEVEL IN STEERING  
GEAR AND REPLENISH WITH  
MORRISOL "SIRROM" (REGD.)  
BRAND STEERING OIL

EVERY 1000 MILES  
REMOVE WHEEL HUB OILS AND  
GIVE ONE STROKE OF OILGUN  
TO NIPPLE EXPOSED ON END  
OF HUB

EVERY 500 MILES  
APPLY ENOTS OILGUN TO  
NIPPLES INDICATED AND GIVE  
3 OR 4 STROKES

IN ENOTS OILGUN USE MORRISOL "SIRROM" (REGD.) BRAND TRANSMISSION OIL