


THE MORRIS 5-cwt. VAN LUBRICATION CHART

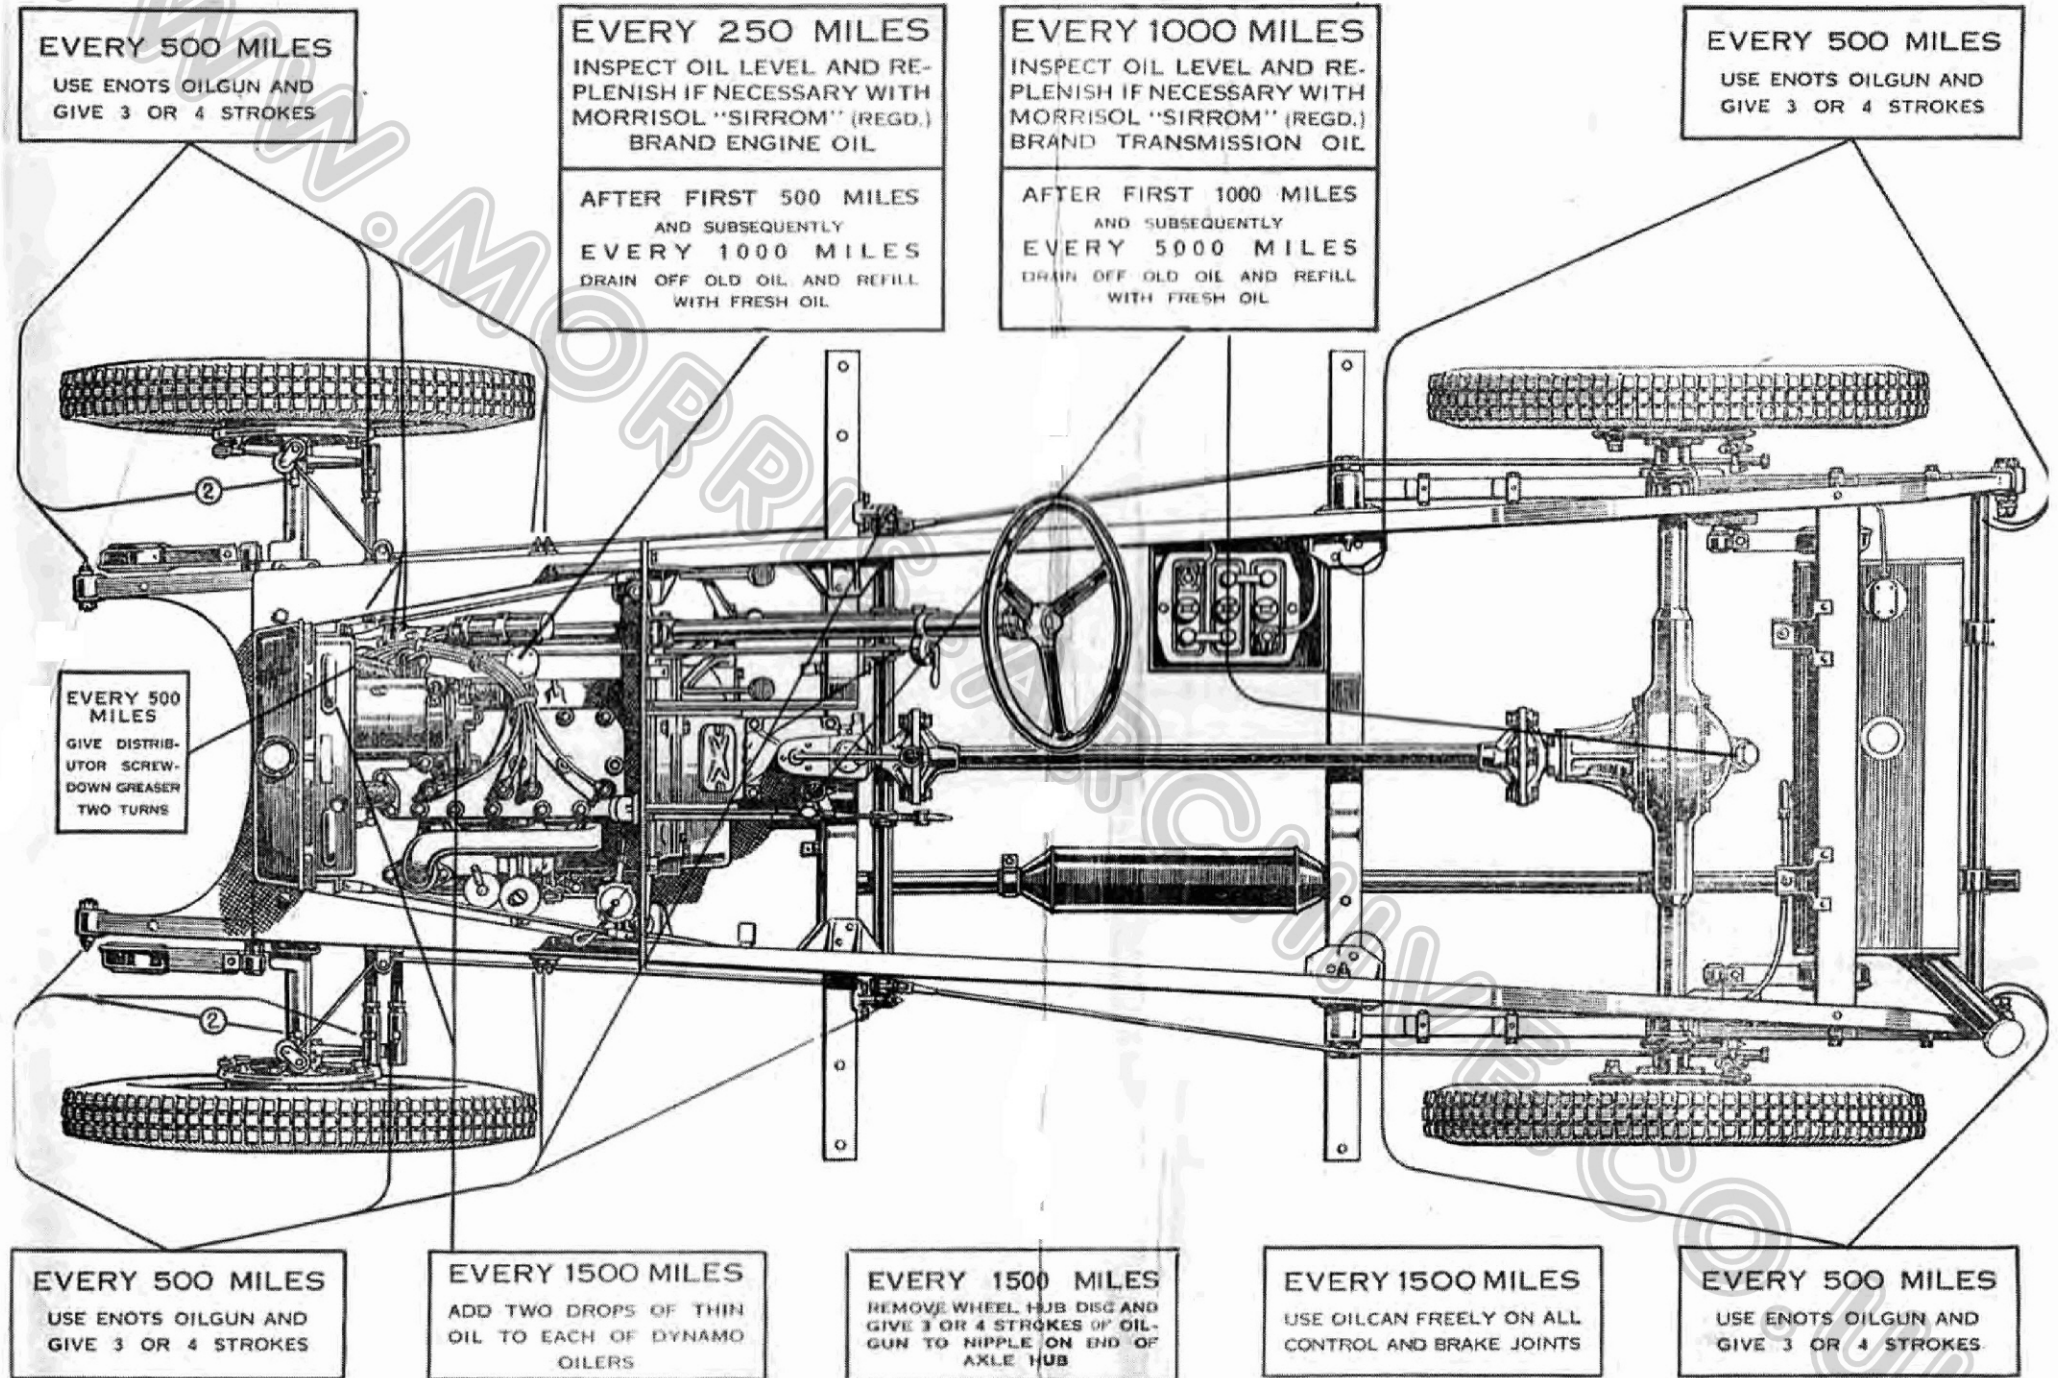

EVERY 500 MILES
USE ENOTS OILGUN AND
GIVE 3 OR 4 STROKES

EVERY 250 MILES
INSPECT OIL LEVEL AND RE-
PLENISH IF NECESSARY WITH
MORRISOL "SIRROM" (REGD.)
BRAND ENGINE OIL

EVERY 1000 MILES
INSPECT OIL LEVEL AND RE-
PLENISH IF NECESSARY WITH
MORRISOL "SIRROM" (REGD.)
BRAND TRANSMISSION OIL

EVERY 500 MILES
USE ENOTS OILGUN AND
GIVE 3 OR 4 STROKES

AFTER FIRST 500 MILES
AND SUBSEQUENTLY
EVERY 1000 MILES
DRAIN OFF OLD OIL AND REFILL
WITH FRESH OIL

AFTER FIRST 1000 MILES
AND SUBSEQUENTLY
EVERY 5000 MILES
DRAIN OFF OLD OIL AND REFILL
WITH FRESH OIL

EVERY 500
MILES
GIVE DISTRIB-
UTOR SCREW-
DOWN GREASER
TWO TURNS

EVERY 500 MILES
USE ENOTS OILGUN AND
GIVE 3 OR 4 STROKES

EVERY 1500 MILES
ADD TWO DROPS OF THIN
OIL TO EACH OF DYNAMO
OILERS

EVERY 1500 MILES
REMOVE WHEEL HUB DISC AND
GIVE 3 OR 4 STROKES OF OIL-
GUN TO NIPPLE ON END OF
AXLE HUB

EVERY 1500 MILES
USE OILCAN FREELY ON ALL
CONTROL AND BRAKE JOINTS

EVERY 500 MILES
USE ENOTS OILGUN AND
GIVE 3 OR 4 STROKES

IN ENOTS OILGUN USE MORRISOL "SIRROM" (REGD.) BRAND TRANSMISSION OIL